

## Nikon D500 Keyboard Checklist

- Press the 2 Green buttons (**Qual on Release Mode Dial** and **+/-** by LCD panel).
- **Menu→Setup Menu→Reset All Settings→Reset**
- **Hold down Release Mode Dial Lock and turn Release Mode Dial to S**
- **Hold down Mode Button on Release Mode Dial and rotate Main Command Dial for S on LCD screen**
- **Rotate Main Command Dial for 1/2500 on LCD screen**
- **Press AF-Mode Button and rotate Main Command Dial for AF-C on LCD screen**
- **Press AF-Mode Button and rotate Sub Command dial for d25 on LCD screen**
- **Menu→Playback Menu→Playback Display Options→Check/Set Focus Point, None and Overview.**
  - All others are unchecked. GPS screen will appear automatically with GPS attached.
- **Menu→Photo Shooting Menu→Secondary Slot Function→Overflow**
- **Menu→Photo Shooting Menu→Image Quality→JPEG fine**
- **Menu→Shooting Menu→ISO Sensitivity Settings→Auto ISO Sensitivity Control→ON→Maximum Sensitivity→51,200**
- **Menu→Shooting Menu→Active D Lighting→Auto**
- **SOLMETA GMAX SETTINGS AND CALIBRATION (AS REQUIRED)**
- **BAD ELF SETTINGS AND CALIBRATION (AS REQUIRED)**
- **CHECK SETTINGS AND OPERATIONS/TEST SHOTS**