

## Nikon D7100/D7200 Kneeboard Checklist

- **CHARGE AND/OR CHANGE ALL BATTERIES (CAMERA, GMAX, BAD ELF)**
- **ASSEMBLE (AND CLEAN IF REQUIRED) ALL PARTS**
- **SET THE SWITCHES ON CAMERA BODY AND LENS**
  - Camera Body **Focus selector lock**-White dot on **L**
  - Camera Body **Live view selector**-White dot on **still camera** position
  - Camera Body **Focus Mode selector**-White line on **AF** position
  - Lens **Lock switch** to **Unlock**
  - Lens **AF/M switch** to **AF** (autofocus)
  - Lens **OS switch** to **ON** (vibration reduction)
  - Lens **Normal/Active switch** to **Active** (if Nikon lens)
- **CAMERA POWER SWITCH TO ON**
- **SET UP CAMERA VIEWFINDER (DIOPTER)**
  - Use **diopter adjustment control** for your eye
  - Press **shutter button** to check for focus point
- **SET CAMERA ITEMS NOT AFFECTED BY DEFAULTS**
  - Automatic Exposure
    - Rotate **Exposure Mode Dial** to **Automatic/NoFlash**
    - Rotate **Release Mode Dial** to **S** (single frame).
  - Manual Exposure
    - Rotate **Exposure Mode Dial** to **Scene**
    - Rotate **Main Command Dial** to show **Sports** on the INFO (LCD) screen
    - Rotate **Release Mode Dial** to **S** (single frame).
- **SET CAMERA DEFAULTS (3 TOTAL)**
  - Set Two Button Defaults - [Simultaneously press and hold **Two Green Buttons** until top screen flashes]
  - Set Shooting Menu Defaults - [Menu→Photo Shooting Menu→**Reset Photo Shooting Menu**→OK→Yes→OK]
  - Set Custom Settings Defaults - [Menu→Custom Settings Menu→**Reset Custom Settings**→OK→Yes→OK]
  - Change Image Quality to JPEG Fine - [Menu→Photo Shooting Menu→Image Quality→OK→**JPEG Fine**→OK]
  - Change Image Quality to JPEG Fine - [Menu→Photo Shooting Menu→JPEG Compression→OK→**Optimal Quality**→OK]
  - Format the camera media cards (**2 TOTAL**) - [Menu→Setting→Format Memory Card→OK→**Slot 1 or 2**→OK]
- **SOLMETA GMAX SETTINGS AND CALIBRATION (AS REQUIRED)**
- **BAD ELF SETTINGS AND CALIBRATION (AS REQUIRED)**
- **CHECK SETTINGS AND OPERATIONS/TEST SHOTS**

June 2024

## Nikon D7100/D7200 Kneeboard Checklist

- **CHARGE AND/OR CHANGE ALL BATTERIES (CAMERA, GMAX, BAD ELF)**
- **ASSEMBLE (AND CLEAN IF REQUIRED) ALL PARTS**
- **SET THE SWITCHES ON CAMERA BODY AND LENS**
  - Camera Body **Focus selector lock**-White dot on **L**
  - Camera Body **Live view selector**-White dot on **still camera** position
  - Camera Body **Focus Mode selector**-White line on **AF** position
  - Lens **Lock switch** to **Unlock**
  - Lens **AF/M switch** to **AF** (autofocus)
  - Lens **OS switch** to **ON** (vibration reduction)
  - Lens **Normal/Active switch** to **Active** (if Nikon lens)
- **CAMERA POWER SWITCH TO ON**
- **SET UP CAMERA VIEWFINDER (DIOPTER)**
  - Use **diopter adjustment control** for your eye
  - Press **shutter button** to check for focus point
- **SET CAMERA ITEMS NOT AFFECTED BY DEFAULTS**
  - Automatic Exposure
    - Rotate **Exposure Mode Dial** to **Automatic/NoFlash**
    - Rotate **Release Mode Dial** to **S** (single frame).
  - Manual Exposure
    - Rotate **Exposure Mode Dial** to **Scene**
    - Rotate **Main Command Dial** to show **Sports** on the INFO (LCD) screen
    - Rotate **Release Mode Dial** to **S** (single frame).
- **SET CAMERA DEFAULTS (3 TOTAL)**
  - Set Two Button Defaults - [Simultaneously press and hold **Two Green Buttons** until top screen flashes]
  - Set Shooting Menu Defaults - [Menu→Photo Shooting Menu→**Reset Photo Shooting Menu**→OK→Yes→OK]
  - Set Custom Settings Defaults - [Menu→Custom Settings Menu→**Reset Custom Settings**→OK→Yes→OK]
  - Change Image Quality to JPEG Fine - [Menu→Photo Shooting Menu→Image Quality→OK→**JPEG Fine**→OK]
  - Change Image Quality to JPEG Fine - [Menu→Photo Shooting Menu→JPEG Compression→OK→**Optimal Quality**→OK]
  - Format the camera media cards (**2 TOTAL**) - [Menu→Setting→Format Memory Card→OK→**Slot 1 or 2**→OK]
- **SOLMETA GMAX SETTINGS AND CALIBRATION (AS REQUIRED)**
- **BAD ELF SETTINGS AND CALIBRATION (AS REQUIRED)**
- **CHECK SETTINGS AND OPERATIONS/TEST SHOTS**

June 2024

